

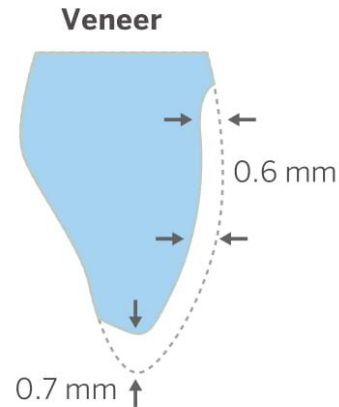


# Crown Preparation Guide


## Anterior

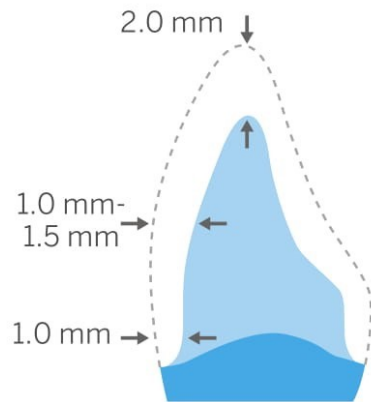

## Posterior

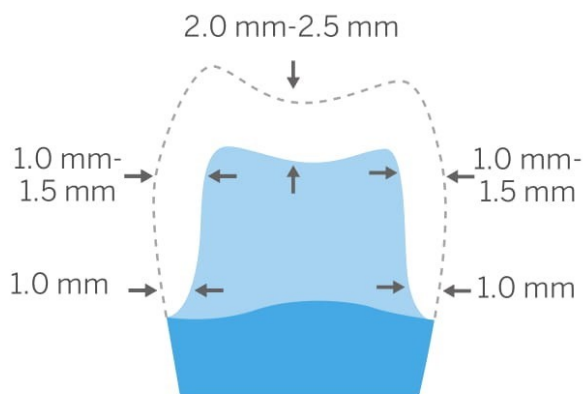

## Margins

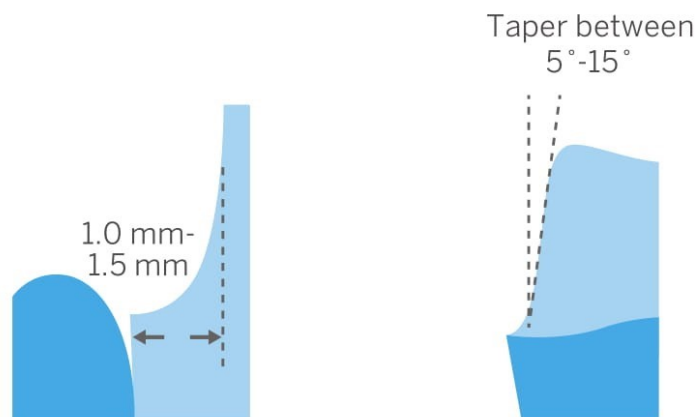

The ideal preparation should be smooth and have a chamfer or slight shoulder margin, with no sharp edges or irregular grooves. For best results, apply 1.5 – 2mm occlusal reduction, 1-1.5mm circumferential reduction and around 1mm reduction near the cervical region. Retentive elements, if required, should have a minimum radius of 0.5mm.